



258 Air Impact Wrench Parts List

Item	Part Description	Part Number	Item	Part Description	Part Number
1	Housing Assembly	258-A40	28	Vane Packet (set of 6 Vanes)	258-42-6
1A	Warning Label	WARNING-27-99	29	Cylinder Assembly	258-A3
2	Valve Seat	255-118A	30	Cylinder Dowel (short)	251-98
3	Reverse Valve Stop Pin	235-421	31	Cylinder Dowel (long)	223-524
4	Reverse Valve Spring	207-334	32	Front End Plate Assembly	255-A11
5	Reverse Valve	255A-329	33	O-Ring	255-167
6	Retaining Ring	255A-218	34	Oil Seal	255-708
7	Retaining O-Ring	255A-338	35	Hammer Case O-Ring	255-168
8	Motor Housing Cover	255A-202	36	Hammer Cage	258-712
9	Housing Cover Gasket	255A-739	37	Spindle Guide Pin (2)	258-704
10	Throttle Valve	255-302	38	Spindle Guide	258-630
11	Throttle Valve Spring	255-51	39	Ball	255-723
12	Valve Spring Retainer	255-606	40	Hammer Cam	255-724
13	Spring Pin (2)	255-39	41	Hammer Cam Ring	255-117
14	Swivel Inlet Collar	255-30	42	Hammer Spring	255-707
15	Swivel Bushing Assembly	255-A781	43	Anvil Shank Assembly	255-A626
16	O-Ring	255-290	44	Socket Retaining O-Ring	251-426
17	Inlet Bushing Assembly	255-A465	45	Socket Retaining Ring	251-425
18	O-Ring	255-166	46	Anvil Spacer	258-165
19	Spring Pin	255-49	47	Hammer Case Assembly	255-A727
20	Exhaust Deflector Screw (2)	255-69	48	Hammer Case Bushing	255-641
21	Exhaust Deflector	255-23	49	Hammer Case Oil Seal	255-271
22	Trigger Assembly	258-A93	50	Hammer Case Cap Screw (4)	255-640
23	Trigger Retainer	258-94	51	Housing Cover Screw Washers (8)	251-57
24	Trigger Retainer Screw	255-318	52	Housing Cover Cap Screws (4)	255-638
25	Rotor Bearing (2)	255-24	53	Oil Plug Assembly	255-A377
26	Rear End Plate	255-12	54	Oil Plug Screw O-Ring	255-378
27	Rotor	258-53	55	Name Plate	258-301