



**4151/4152 Random Orbital Sander Parts List**

Item	Part Description	Part Number	Item	Part Description	Part Number
1	Housing Assembly	04700753	21	Shroud	
2	Label			Black	04648887
	4151	04648663		Red	4152-747
	4151-2	89947766	22	Snap Ring	04648762
	4152	4152-301	23	Ball Bearing	04648812
3	Regulator Assembly	4151-2-A165	24	Rear End Plate	04648945
4	O-Ring	4151-65	25	Cylinder Seal	04649042
5	Snap Ring	4151-797	26	Cylinder Assembly	04649976
6	Valve Stem	04648770	27	Rotor	04648820
7	Grip Ring	4151-747	28	Vane Pack (set of 5)	48254-42-5
8	Grip Ring (4151-2)	4151-2-747BLK	29	Front End Plate	04648929
9	Lever	04655478	30	O-Ring	04649133
10	Spring Pin	04649117	31	Lock Ring	04648853
11	Valve Seat	04648804	32	Counterbalance Assembly	
12	Tip Valve	04648796		4151 Series (3/16")	04653333
13	Spring	04648747		4152 Series (3/32")	89941470
14	Inlet Adapter	04649083	32A	Needle Bearing	04649000
15	Muffler Assembly	04649034	33	Key	04648754
16	Extension (4151-2)	4151-2-307	34	Spindle Assembly	04649984
17	Inlet Bushing (4151-2)	4151-2-565	35	Retaining Ring	04649091
18	Exhaust Bushing (4151-2)	4151-2-566	36	Sanding Pad	
19	Port Plug	04649059		6" Pad - Vacuum Ready (Vinyl)	49099-1
20	Vacuum Adapter (cuff size)			5" Pad - Vacuum Ready (Vinyl)	49096-1
	25 mm (1")	4151-809		6" Pad - Vacuum Ready (H & L)	49835
	28 mm (1-1/8")	4151-809-28	37	Pad Wrench	04648739
	32 mm (1-1/4")	4151-809-32	38	Motor Wrench (NOT INCLUDED with tool)	48869