



111 and 1111 Air Ratchet Wrench Parts List

Item	Part Description	Part Number	Item	Part Description	Part Number
	Housing Assembly	111-A40	27	Anvil Spring	110A-728
1	Housing		28	Mechanism Cover	110A-727
2	Warning Label	222-99	29	Thrust Bearing	110A-723
3	Exhaust Cover	110-123	30	Coupling Sleeve Assembly	110A-A107
4	Inlet Bushing Assembly	110-A465	31	Coupling Nut	111-27
5	Trigger Lever			Ratchet Housing Assembly	110A-A322
	for 111	111-273	32	Ratchet Housing	
	for 1111	1111-273	33	Grease Fitting	D0F9-879
6	Trigger Lever Pin	107-120	34	Crankshaft Needle Bearing (2)	107-32
	Throttle Valve Assembly	110-A302	35	Crankshaft	110-35
7	Throttle Valve		36	Drive Bushing	110-36
8	Throttle Valve O-ring	107-314	37	Yoke	109XP-37
9	Valve Seat	107-710	38	Thrust Washer	110-47
10	Throttle Valve Spring	107-51	39	Reverse Button	110A-38
	Valve Plug Assembly	107-A229A	40	Reverse Button Spring	110-34
11	Valve Plug		41	Reverse Button Pin	110-39
12	Valve Plug O-ring	107-259	42	Anvil Assembly	
13	End Cap	107-624		for 111	111-44
14	Rear Rotor Bearing	107-24		for 1111	1111-44
15	Rear End Plate	110-12	43	Lock Spring	110A-41
16	Rotor	110-53	44	Lock Pin	110A-49
17	Vaness (set of 4)	107-42-4	45	Pawl	110A-43
	Cylinder Assembly	111-A3	46	Pawl Retaining Pin	107-34
18	Cylinder		47	Friction Spring (2)	107-45
19	Motor Alignment Pin	107-98	48	Friction Ball (2)	107-696
20	Front End Plate	107-11	49	Thrust Washer	1077-46
21	Front Rotor Bearing	107-97	50	Retaining Ring	107-426
22	Spacer	110A-18		Tune-up Kit (includes items 8, 9, 10, 12, 14, 17 and 21)	110-TK1
23	Mechanism Housing	110-724		Ratchet Head Kit (includes items 38 through 50)	
24	Ball	107-31		for 111	111-TRK1
25	Mechanism Anvil	110-626		for 1111	1111-TRK1
26	Anvil Pin (2)	110-704			