



(Dwg. TPA1483)

231GXP Air Impact Wrench Parts List

Item	Part Description	Part Number	Item	Part Description	Part Number
*	Motor Housing Assembly	231GXP-A40	23	Rear Endplate Assembly	231-A12
1	Motor Housing	231GXP-B40	24	Rear Rotor Bearing	402-22
2	Warning Label	WARNING-2-99	25	Rotor	231-53
3	Nameplate	231GXP-301	26	Vane	2131-42A-6
4	Grease Fitting	131-188	27	Cylinder	131-3
5	Grip	231G-747	28	Front Endplate Assembly	231-A11
6	Throttle Valve Seat	131-303	29	Front Rotor Bearing	4U-97
7	Reverse Valve Bushing	231-A330	30	Cylinder Dowel	230-98
8	Reverse Valve Bushing Seal	PS3-67	31	Motor Clamp Washer	227-207
9	Reverse Valve	131-329	32	Hammer Frame Rear Washer	231-706
10	Reverse Valve Detent Spring	131-664	33	Hammer Frame	2131-703
11	Reverse Valve Detent Ball	AV1-255	34	Hammer	231XP-724
12	Reverse Valve Knob	131-666	35	Hammer Pin	231-704
13	Reverse Valve Knob Screw	131-665	36	Anvil	231B-A626
14	Inlet Bushing	131-565	37	Socket Retainer O-ring	R1A-159
15	Exhaust Deflector	7811R-123	38	Socket Retaining Ring	231-425A
16	Throttle Valve Spring	131-51	39	Hammer Case Pilot	405-800
17	Throttle Valve	131-50	40	Hammer Case Gasket	230-36
18	Exhaust Silencer	235-311	41	Hammer Case	131-A927
19	Trigger Assembly	231H-A93	42	Hammer Case Bushing	705-941
20	Trigger Retainer	131-656	43	Hammer Case Lock Washer	131-637
21	Endplate Gasket	231-283	44	Hammer Case Cap Screw	131-638
22	Rear Rotor Bearing Retainer	131-118			

* o. Abb.