

7802A/7803A Air Drill Parts List

Item	Part Description	Part Number	Item	Part Description	Part Number
1	Housing Assembly		5	Gearcase Assembly	
	for 7802A	7802A-A40		for 7802A	7802A-A37
	for 7803A	7803A-A40		for 7803A	7803A-A37
1a	Housing		5a	Gearcase	
1b	Rear Rotor Bearing		5b	Planet Gear (set of 3)	7802A-A10
1c	Throttle Valve Seat		5c	Gear Head	
1d	Nameplate		5d	Planet Gear (set of 3)	7803A-A10
	for 7802A	7802A-301	5e	Grease Fitting	
	for 7803A	7803A-301	5f	Spindle	
1e	1-800-Label			for 7802A	7802A-8
2	Inlet / Exhaust Assembly	7802A-A50		for 7803A	7803A-8
2a	Inlet Bushing		5g	Ball Bearing (2)	7802A-105
2b	Exhaust Deflector		5h	Retaining Ring	
2c	Throttle Valve Spring		5i	Inner Bearing Spacer	
2d	Throttle Valve		5j	Outer Bearing Spacer	
2e	Exhaust Silencer Frame		6	Chuck	
2f	Exhaust Silencer			for 7802A	7811-99
2g	Silencer Element			for 7803A	7816-99
2h	O-Ring		7	Chuck Screw	7811R-254
3	Trigger Assembly	7802A-A93	8	Chuck Key	
3a	Trigger			for 7802A	7811-253
3b	Trigger Shaft			for 7803A	7816-253
3c	Trigger Bushing		9	Handle Assembly for 7803A	7816-A48
3d	O-Ring		9a	Handle	
3e	Trigger Retainer Pin		9b	Handle Cap Screw	
4	Motor Assembly	7802A-A53			
4a	Rear Rotor Retainer				
	Rear Endplate Assembly	7802A-A12			
4b	Rear Endplate				
4c	Endplate Gasket				
4d	Rotor	7802A-53			
4e	Vane Pack (Set of 6 Vanes)	7811R-42-6			
4f	Cylinder and 2 Pins	7802A-A3			
4g	Front Endplate	7811-11			
4h	Front Rotor Bearing	7811-24			
4i	Bearing Support				